



Key to wiring diagram for RHD Spitfire 1500 from commission number FH100020

- | | | | | | |
|----|----------------------------|----|-----------------------------------|----|-------------------------|
| 1 | Alternator | 27 | Rear fog light switch | 53 | Hazard warning switch |
| 2 | Ignition warning light | 28 | LH sidelamp | 54 | Indicator warning light |
| 3 | Ignition coil | 29 | RH sidelamp | 55 | Two-speed wiper motor |
| 4 | Distributor | 30 | Map light | 56 | Two-speed wiper switch |
| 5 | Tachometer | 31 | Fuel gauge illumination | 57 | Screen washer motor |
| 6 | Ignition switch | 32 | Temperature gauge illumination | 58 | Voltage stabiliser |
| 7 | Battery | 33 | Speedometer illumination | 59 | Fuel gauge |
| 8 | Two-speed heater motor | 34 | Tachometer illumination | 60 | Tank gauge |
| 9 | Two-speed heater switch | 35 | Cigar lighter illumination | 61 | Temperature gauge |
| 10 | Starter solenoid | 36 | LH dip beam | 62 | Temperature sender unit |
| 11 | Starter motor | 37 | RH dip beam | 63 | Brake lamp switch |
| 12 | Oil pressure warning light | 38 | LH main beam | 64 | LH brake lamp |
| 13 | Oil pressure switch | 39 | RH main beam | 65 | RH brake lamp |
| 14 | Reverse lamp switch | 40 | Main beam warning light | 66 | Flasher unit |
| 15 | LH reverse lamp | 41 | Main, dip beam and flasher switch | 67 | Indicator switch |
| 16 | RH reverse lamp | 42 | Horn push | 68 | RH rear indicator lamp |
| 17 | Overdrive solenoid | 43 | Boot lamp | 69 | RH front indicator lamp |
| 18 | Overdrive in-out switch | 44 | Boot lamp switch | 70 | LH rear indicator lamp |
| 19 | Gearbox inhibitor switch | 45 | LH interior light | 71 | LH front indicator lamp |
| 20 | Headlamp switch | 46 | Door switch | 72 | Fuses |
| 21 | LH seat switch | 47 | Cigar lighter | 73 | Radio supply |
| 22 | LH belt switch | 48 | RH horn | 74 | LH tail lamp |
| 23 | RH belt switch | 49 | LH horn | 75 | LH number plate lamp |
| 24 | Seat belt warning light | 50 | RH interior light | 76 | RH number plate lamp |
| 25 | Rear fog warning light | 51 | Hazard flasher unit | 77 | RH tail lamp |
| 26 | Rear fog light | 52 | Hazard warning light | 78 | Ballast resistor wire |